



**BIO MATRIX**

MOLD MONITOR



QUICK START INSTRUCTIONS



## **Instructional Video**


For a video on how to set up your BioMatrix Mold Monitor, please visit [App.BioMatrixSystems.com](https://App.BioMatrixSystems.com) and click on the video link.

**B I O M A T R I X**  
S Y S T E M S

# Creating your BioMatrix Systems Account


## Step 1

Navigate to  
App.BioMatrixSystems.com

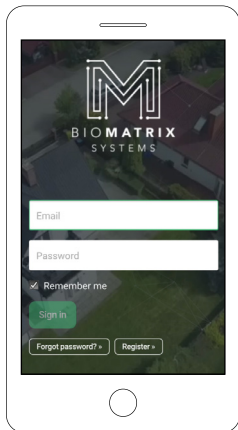


## Step 2

Click the "Register"  
button to create your account

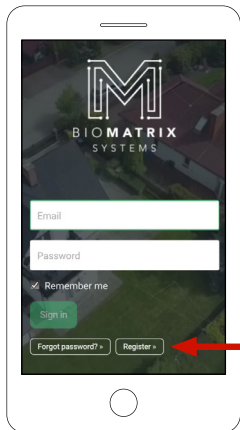

### Step 3


Fill out your information and click "Sign up"

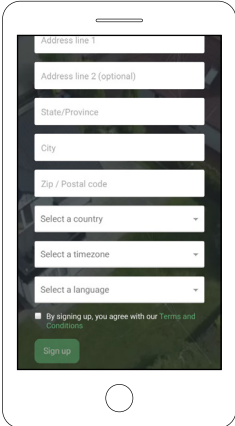

A smartphone screen displaying a registration form. The form consists of several white input fields stacked vertically on a dark background. The fields are labeled: "Address line 1", "Address line 2 (optional)", "State/Province", "City", "Zip / Postal code", "Select a country" (with a dropdown arrow), "Select a timezone" (with a dropdown arrow), and "Select a language" (with a dropdown arrow). Below the fields is a checkbox with the text "By signing up, you agree with our Terms and Conditions". At the bottom of the form is a green button labeled "Sign up".


### Step 4

Once registered, an activation email will be sent to you

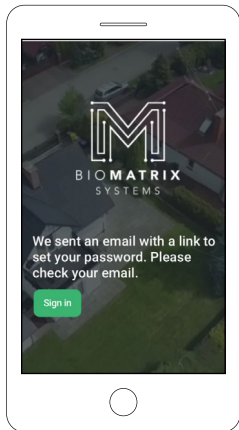


## Step 4

In the email, click the  
"Activate my account" button

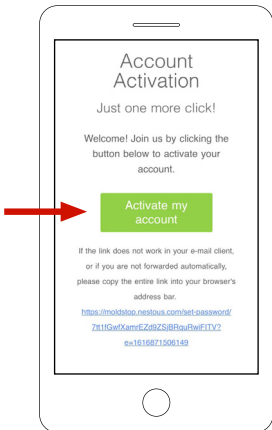


## Step 5

You will be prompted to set your password

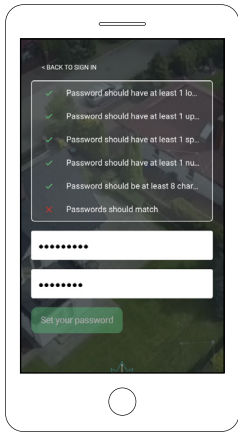

## Step 6


Enter your email address and password and click "Sign in"

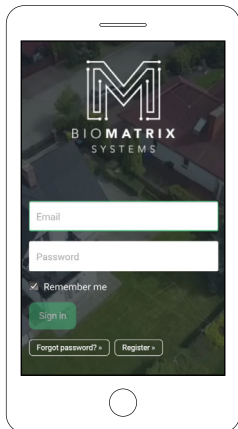

# Using the App


## Step 1

Click the "+" button to add a premise and name it

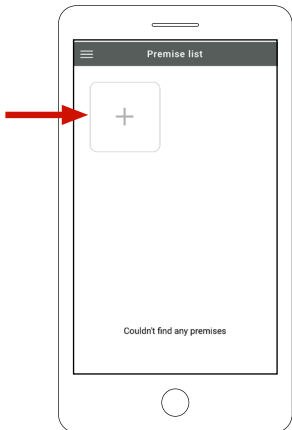


## Step 2

Type in a name for the premise

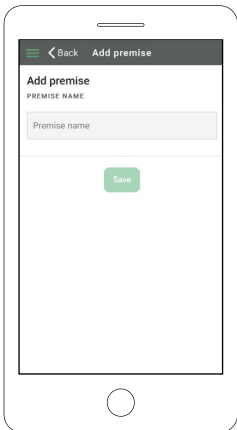


### Step 3

Click the button for the premise you just added

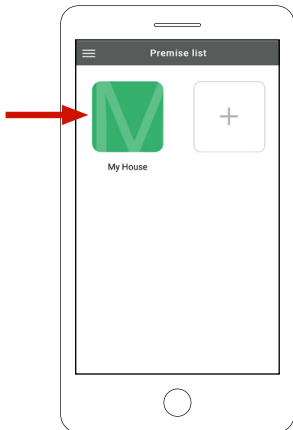


### Step 4

Enter the serial number and the DUID number

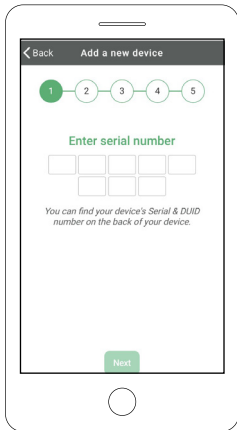




The serial number and the DUID number can be found on the back of the mold monitor device

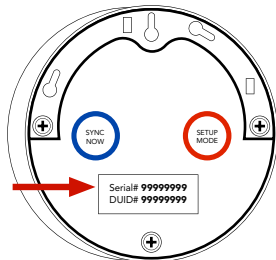


## Step 5

Enter a name for your device

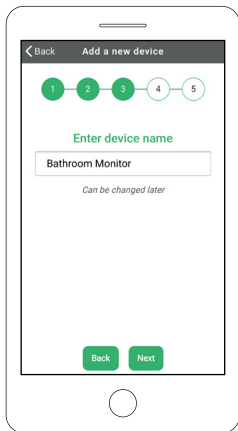


## Step 6

Set the alarm threshold

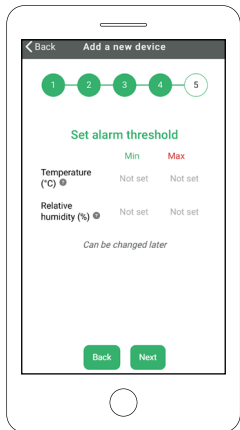

## Step 7


Add a note about this device specific to its location

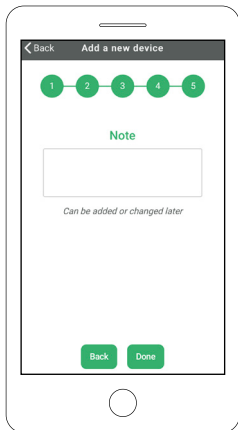

# Pairing with your WiFi network


## Step 1

Press the red "setup mode" button on the back of the monitor

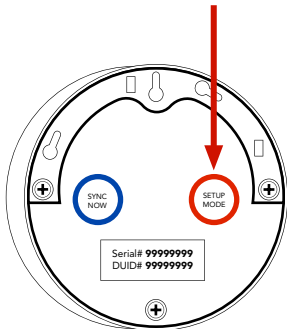


## Step 2

In your Wi-Fi settings, find the MOLD STOP network

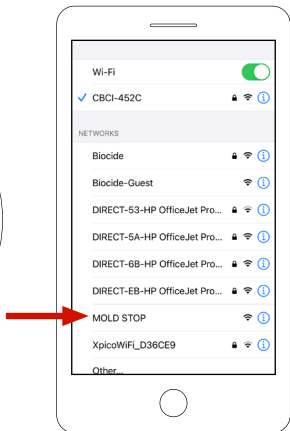


## Step 3

After the browser window pops up, click "Next"

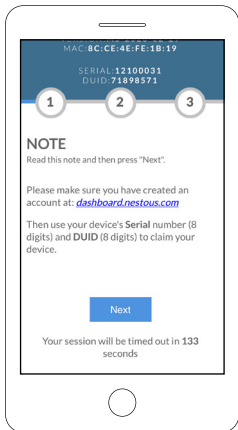

## Congratulations!

You are now ready to explore the BioMatrix Mold Monitor app!

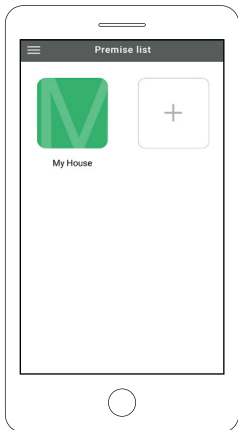



**B I O M A T R I X**

MOLD MONITOR

**Thank you for your purchase**

Thank you for purchasing the BioMatrix Mold  
Monitor. For more help, please visit

**[App.BioMatrixSystems.com](http://App.BioMatrixSystems.com)**